
## **LEVER ON ROSE**


- UNSPRUNG CARTRIDGE

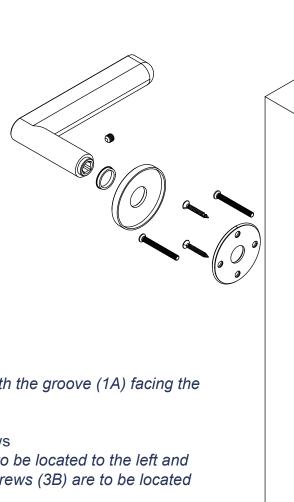

- 1. Supplied spindle

  Ensure the spindle is inserted with the groove (1A) facing the
  grub screw (7)
- 2. Unsprung cartridge
- 3. Back to back bolts & wood screws
  The back to back bolts (3A) are to be located to the left and
  right of the spindle. The wood screws (3B) are to be located
  above and below the spindle
- 4. Outer rose cover
- 5. Nylon washer
- 6. Lever handle
- 7. Grub screw

**Note:** We strongly recommend requesting a sample before committing to any cutting or drilling

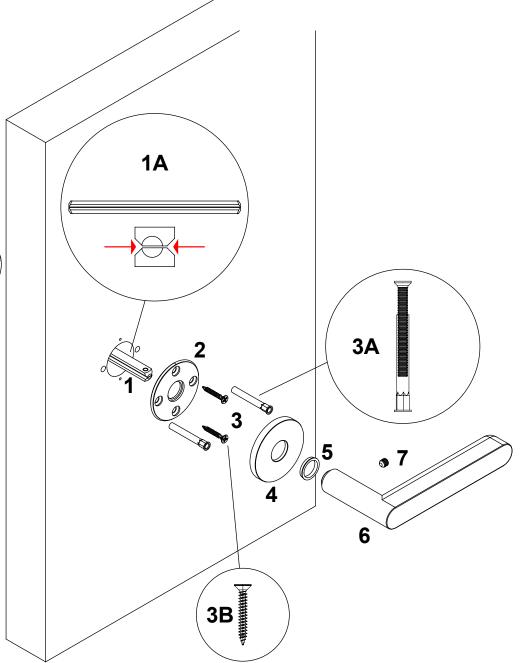

FITTING INSTRUCTIONS