


DIAGRAM

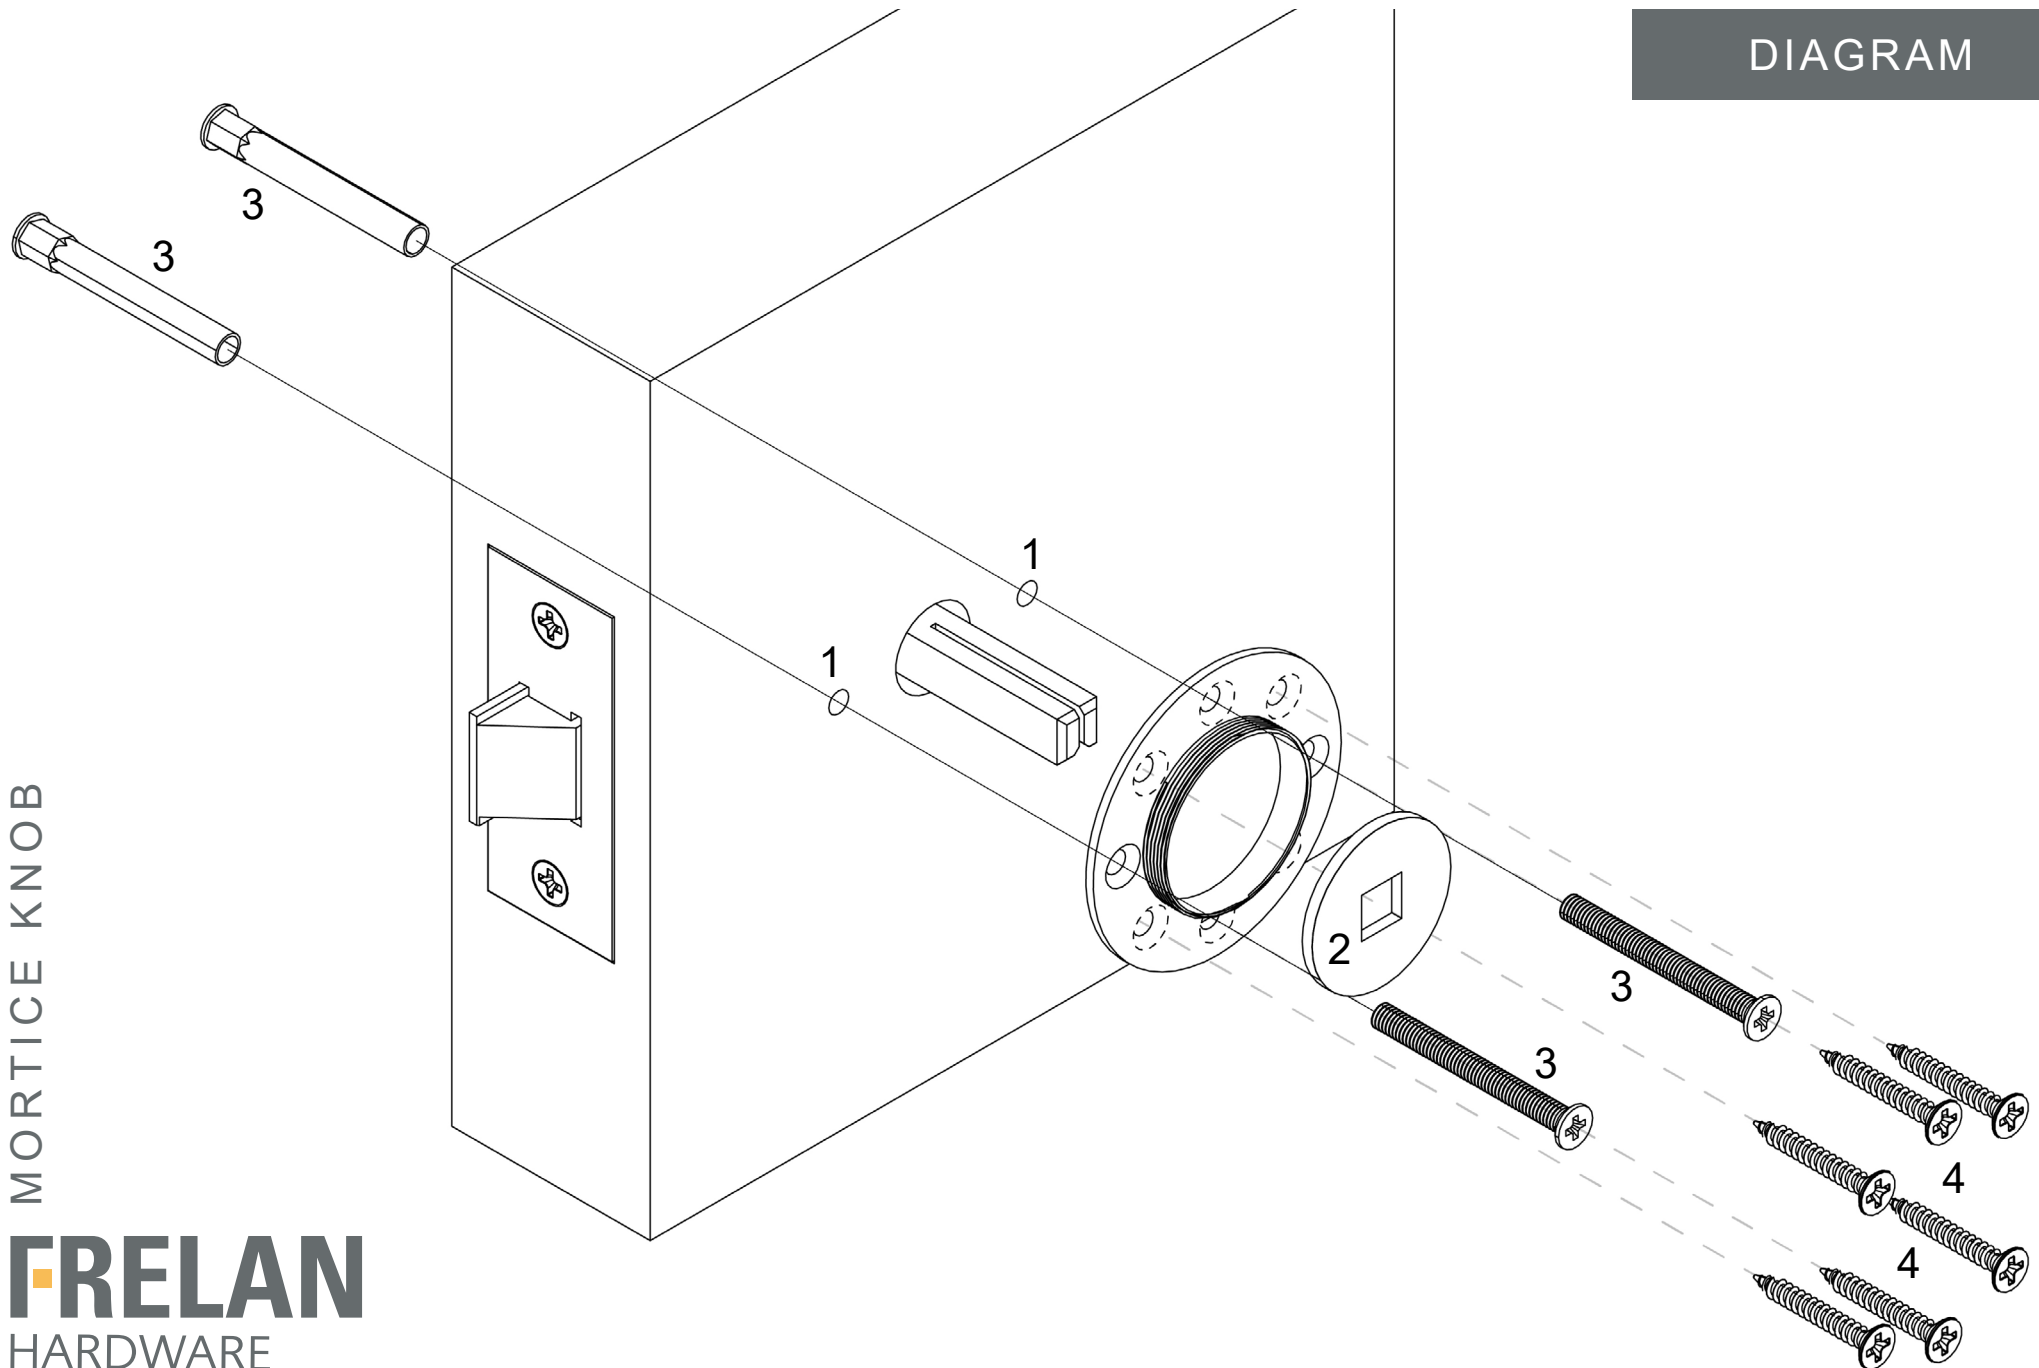

MORTICE KNOB

FRELAN
HARDWARE

INSTRUCTIONS

1. Place the rose insert over the spindle, aligning the rose holes with the lock case
 2. Place the plastic insert over the spindle
 3. Place the back to back screws through the holes aligning with the lock case, and screw them into the corresponding part, inserted from the other side of the door
 4. Secure the rose to the door with the remaining wood screws
- Note: it is advised to drill pilot holes*
5. Place the mortice knob over the spindle and screw the mortice knob rose onto the rose insert

For face fixing, follow the above steps without using the back to back fixings.

MORTICE KNOB

FRELAN
HARDWARE

Parts

